


**SELECTAMARK STENCILS  
APPLICATION PROCEDURE  
USING SMALL TUBES OF COMPOUND**

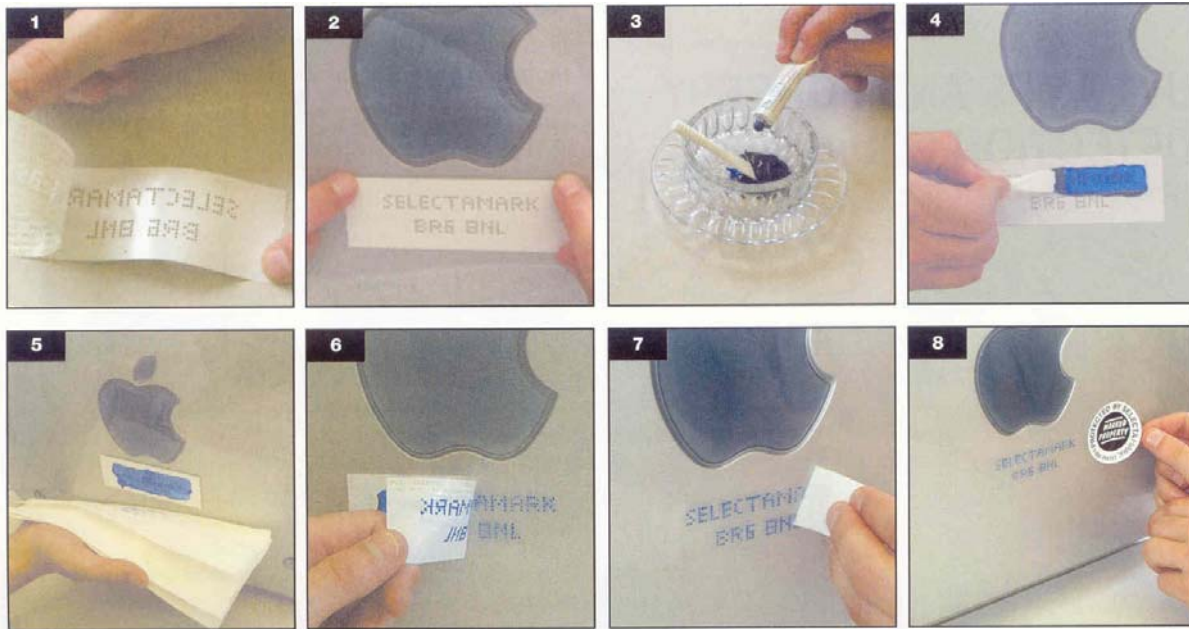

- 1) Remove backing paper (wider strip only) from stencil.
- 2) Affix stencil to the item to be marked (and rub down firmly with backing paper, particularly around the holes).
- 3) Pierce tube (using spike in cap) and squeeze plastic marking compound out into a non-plastic receptacle (glass or ceramic ashtray for example).
- 4) Spread compound into the dot-matrix holes using spreader and leave for approx 30 seconds. (Use only enough compound to fill the holes).
- 5) Dab off excess chemical with a clean, dry paper kitchen towel.
- 6) Peel off and discard stencil.
- 7) **DO NOT TOUCH FOR 24 HOURS.** If desired, you can dry or 'cure' the mark by wiping with surgical spirit/alcohol.
- 8) Attached 'MARKED PROPERTY' warning sticker.