


APPLICATION INSTRUCTIONS – STENCILS

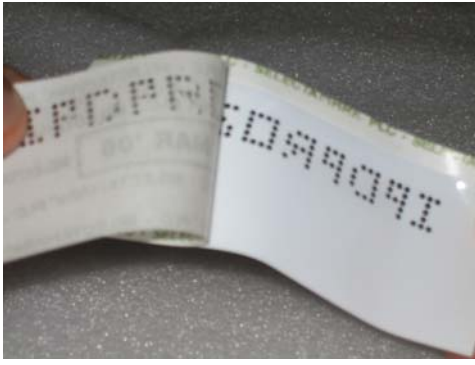

1. Peel wider strip of backing paper away from the stencil (leaving the narrow strip).



2. Stick stencil to flat clean surface of item to be marked, in correct position.



3. Using the NON greasy side of the backing paper, rub down very firmly across the punched letters to ensure all air bubbles are expelled and stencil is stuck firmly to the surface.



4. Squeeze some Marking Compound from the tube into a glass or ceramic dish. (This is usually easier than working from the tube).



5. Using the spreader provided, spread a little Marking Compound across the punched letters, ensuring all holes are filled with Compound. Remove any excess Compound with the tip of the spreader.



6. Using a clean, folded paper kitchen towel, gently dab mark (DO NOT RUB across it) to lift off any excess Marking Compound).



7. After approx 30 seconds, carefully peel away the Stencil and discard immediately.



8. Leave mark for several hours to dry and harden (DO NOT TOUCH mark), or wipe with an ALCOHOL swab (do NOT use any other liquid!)